

# Installation tips




Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.


Lay a mat or old blanket out to assemble onto so the floor and the furniture doesn't get scratched or damaged during building.

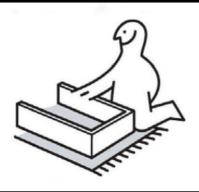

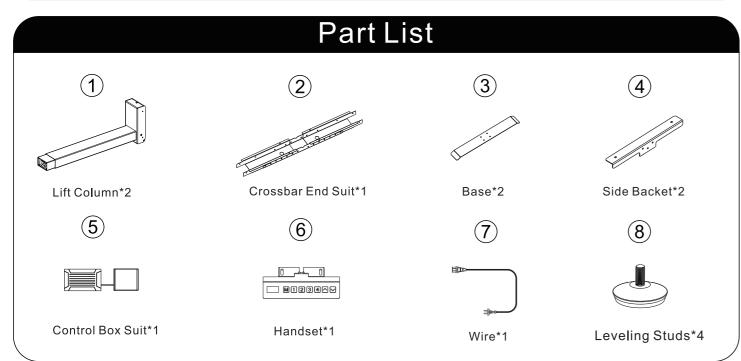

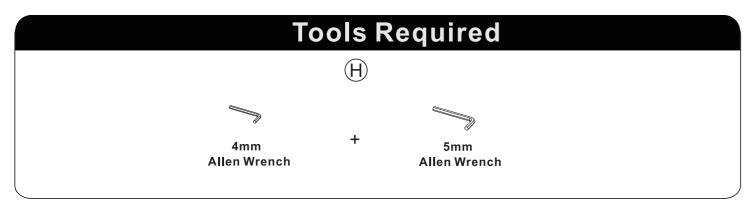


# STEP 1:

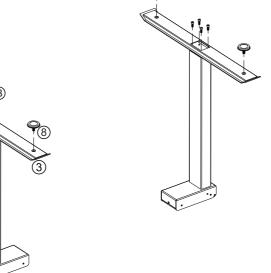


- Lift Column \*2
   Base \*2
- 8 Leveling Studs \*4B M6×16 Screws \*8

# STEP 2:

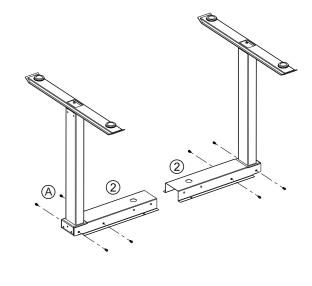


- ② Crossbar End Suit \* 1
- $\bigcirc$  M6 $\times$ 12 Screws \*8

# STEP 3:

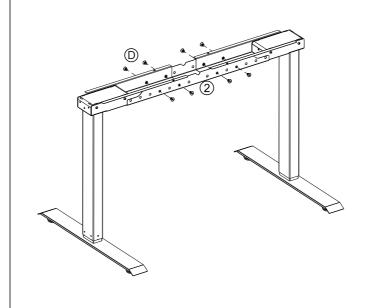

- ② Crossbar End Suit \* 1
- M8×12 Screws \*

# STEP 4:

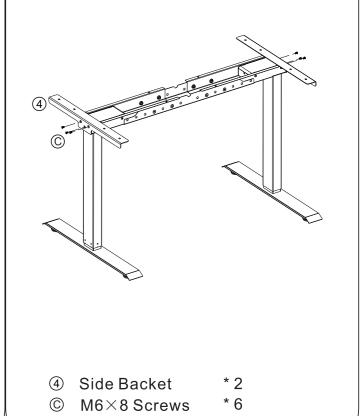


#### STEP5

# Control Box Adapter


- -Control box is equipped with gyro sensor so the table and control box must be leveled.
- -Please adhere control box into crossbar with glue pad in order to work properly or else it will not move up and down.
- © Glue Pad
- (5) Control Box Suit
- 7 Wire

#### STEP6

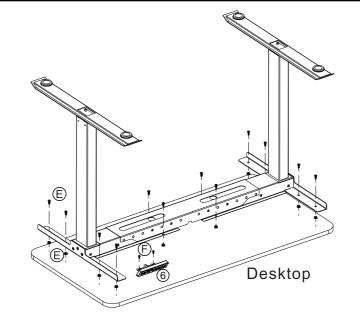

- 6 Handset
  - M5×18 Screws \* 12
- © M4×12 Screws
- Washers \* 12



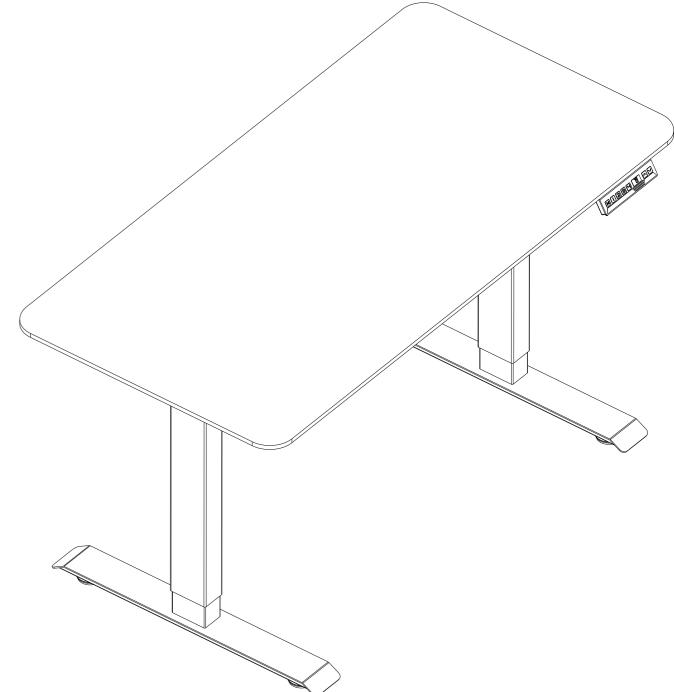

#### **Ready To Use**

### Before Plugging the table into the outlet, make sure that - The lift columns are level and set at the lowest position.

- All the screws are tightened, to avoid the desk making noise and wobbling. Activate the desk by following the next steps.

- -Please press button down and hold for 10-15 seconds until it stutters and beeps.
- -Release the button, then your desk is ready to use.

## **Operation Guide**

- 1. Memory desired height
  -Press button "M", display show "S-" with flash.
- -Press number and set desired position.


#### 2. Advanced Safety feature- lock and unlock the table.

- -Press button up and down at same time for 5 seconds, display "LOC"
- -All single button will be inactive and table will be unable to move.
- -Pressing button up and down together willunlock the keypad and release the LOC

#### 3. Reset the table

#### When display show Error code or RST, Please reset the table.

- -Unplug the power cord from the control box.
- -Unplug the cable that links the keypad to the control box.
- -Wait 30 minutes and plug all the cables in again.
- -Do the reset: please press button down and hold for 10-15 seconds until it stutters and beeps.

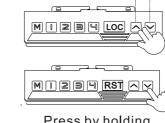

Press by holding 10-15 seconds

If the keypad displays HOT, please unplug and replug and let it cool off for a couple of minutes before proceeding again.

